


NESTOR  
SA-522, SA-523

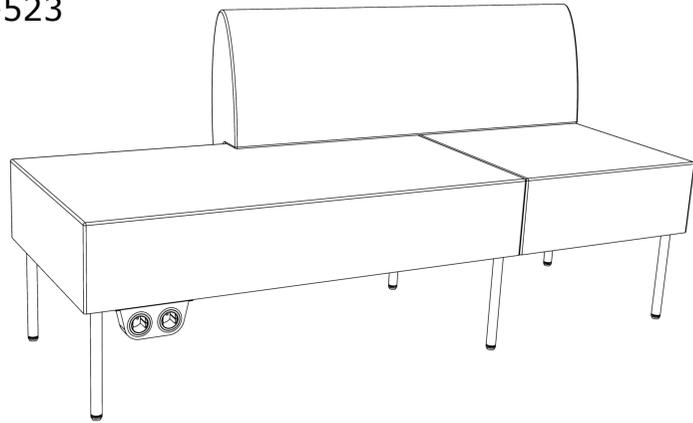

www.kondator.se

# Powerdot Bracket Mini

- 935-SF02W
- 935-SF02B



**CONTENT:**

- x1
- x2
- x4

**1 ASSEMBLE WITH POWERDOT & NUTS**  
Feed the Powerdot Mini cable through all holes. Then, insert the Powerdots through the Bracket and Distancing Nut.

**2 MOUNT BUSHING TO NUT**  
Mount the Powerdot Nut until it is thoroughly tightened to the distancing nut. Test the assembly by shaking it. If it rattles, then the Powerdot Mini is not fully tightened.

**3 MOUNT TO TABLE / FURNITURE**  
Using 4 to 6 screws (4x16 mm), mount the assembled bracket with all components to the underside of intended furniture or table.

**4 ROUTE CABLES AND PLUG IN**  
Once all steps are completed, route the cables appropriately for the intended usage and connect the plugs to sockets. Visit our website to find cable-management accessories.

Attach the Wieland cables to the T-junction